

E51 Series Safe Usage for Hotel

TO OPEN THE SAFE WITH THE KEY / TO INSTALL BATTERIES

Remove the cap on the panel, insert the key and turn the key clockwise for about 90°, and turn the handle anticlockwise to open the door. Take off the cover of the box holding the batteries and place 4 pieces AA/1.5V batteries (Alkaline).

TO OPEN THE SAFE WITH PERSONAL CODE

Enter the personal code (the defaultfactory code is 168) and press key „ENTER“, and the green indicator light on, turn the knob anticlockwise, then the door will open.

TO LOCK THE SAFE

Close the door, enter 3 – 6 digit codes to set your personal code and press key „ENTER“, and turn t he knob clockwise, then the safe will be locked.

TO SET PERSONAL CODE

Close the door, enter 3 – 6 digit codes to set your personal code and press key „ENTER“, the code setting is complete.

TO GIVE AN ALARM FOR ERROR

When lock is closed, any incorrect entry code will be rejected. In case of the wrong code, the red indicator light will shine. The third incorrect entry code starts the timer ending after 5 minutes. After 5 minutes timer, you can enter the code again. In case of the wrong entry, you can delete it by pressing the „KEY“ button. In case of the right entry the green indicator will shine. If the light runs out, you will have to enter the code again.

E51 Series Safe Usage for Hotel

TO OPEN THE SAFE WITH THE KEY / TO INSTALL BATTERIES

Remove the cap on the panel, insert the key and turn the key clockwise for about 90°, and turn the handle anticlockwise to open the door. Take off the cover of the box holding the batteries and place 4 pieces AA/1.5V batteries (Alkaline).

TO OPEN THE SAFE WITH PERSONAL CODE

Enter the personal code (the defaultfactory code is 168) and press key „ENTER“, and the green indicator light on, turn the knob anticlockwise, then the door will open.

TO LOCK THE SAFE

Close the door, enter 3 – 6 digit codes to set your personal code and press key „ENTER“, and turn t he knob clockwise, then the safe will be locked.

TO SET PERSONAL CODE

Close the door, enter 3 – 6 digit codes to set your personal code and press key „ENTER“, the code setting is complete.

TO GIVE AN ALARM FOR ERROR

When lock is closed, any incorrect entry code will be rejected. In case of the wrong code, the red indicator light will shine. The third incorrect entry code starts the timer ending after 5 minutes. After 5 minutes timer, you can enter the code again. In case of the wrong entry, you can delete it by pressing the „KEY“ button. In case of the right entry the green indicator will shine. If the light runs out, you will have to enter the code again.